


Service Manual

Ventilating Fan
(North America Market)

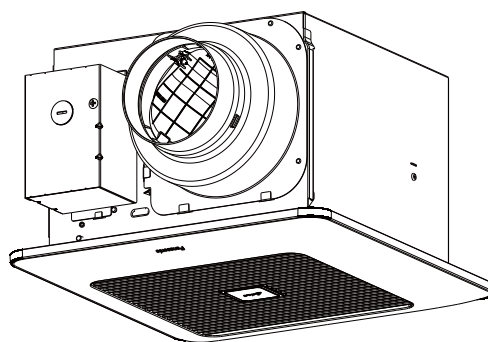

FV-0511VKS2

⚠ WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

IMPORTANT SAFETY NOTICE

There are special components used in this equipment which are important for safety. These parts are marked by ⚠ in the Schematic Diagrams, Exploded Views and Replacement Parts List. It is essential that these critical parts should be replaced with manufacturer's specified parts to prevent shock, fire or other hazards. Do not modify the original design without the manufacturer's approval.
Please have a static electricity depletion process in place before handling these components..
Please use gloves when handling PCB parts during the repair process..

CONTENTS

PAGE

1.Specification	1, 2
2.Parts Identification	3 ~ 7
3.Wiring Diagram	8
4.Parts List	9, 10

1. Specification

■ Specification for base Model fans

Model No.	Air Direction	Voltage (V)	Frequency (Hz)	Duct Diameter (inches)	Air Volume at 0.1 "WG (CFM)	Noise (sones)	Speed (rpm)	Power (W)	Weight Lb. (Kg)
FV-0511VKS2	Exhaust	120	60	4 or 6	110	<0.3	920	9.9	10.1 (4.5)
					80	<0.3	795	5.1	
					50	<0.3	722	3.1	

HVI Certified performance based on HVI Procedures 915, 916, and 920.

■ Specifications for Multi Speed fans

Model No.	Air Direction	Voltage (V)	Frequency (Hz)	Duct Diameter (inches)	Air Volume at 0.1 "WG (CFM)	Noise (sones)	Speed (rpm)	Power (W)	Weight Lb. (Kg)
FV-0511VKS2	Exhaust	120	60	4 or 6	100	<0.3	889	7.9	10.1 (4.5)
					90	<0.3	839	6.5	
					80	<0.3	795	5.1	
					70	<0.3	760	4.3	
					60	<0.3	751	3.7	
					50	<0.3	722	3.1	
					40	<0.3	707	2.7	
					30	<0.3	711	2.4	
					0	—	—	0.5 (*)	


Reference performance based on HVI Procedures 915, 916, and 920. [(*) Standby wattage.]

1. Specification


Remark: We divide this model into Version A & Version B, because of different motor and Main PCB Section, please put attention with identification of parts when you request a service parts.

Parts for Version A

Motor

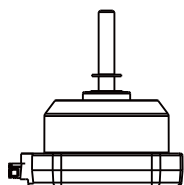


Side view

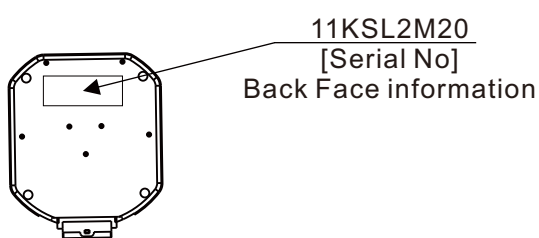


Parts for Version B

Motor

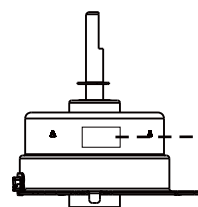


Side view

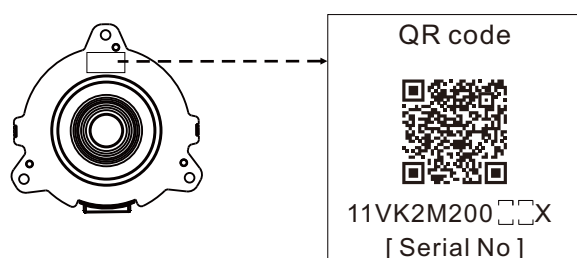


Top Cover view


Main PCB Section

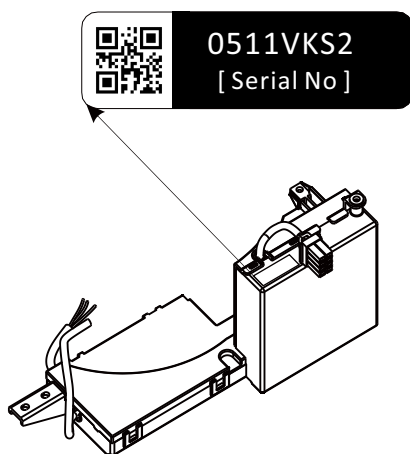


Motor Support

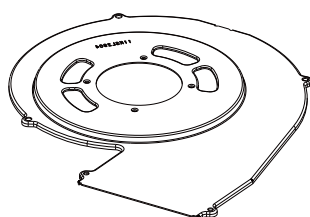

Main PCB Section

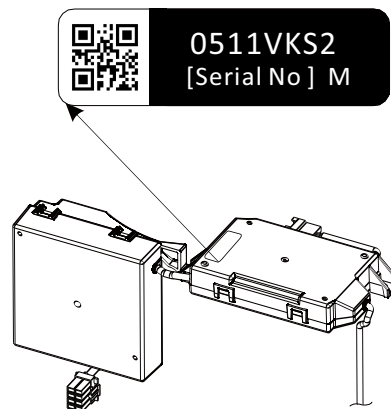

Motor Support

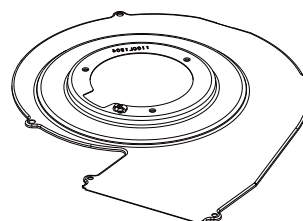



Motor	Main PCB	Judgment
Version A	Version A	(OK) Work
Version A	Version B	(NG) Do Not Work
Version B	Version B	(OK) Work
Version B	Version A	(NG) Do Not Work

2. Parts Identification

FV-0511VKS2

Main Body Section

Name Plate

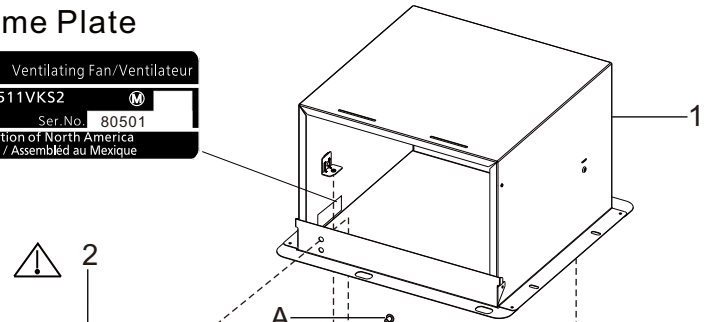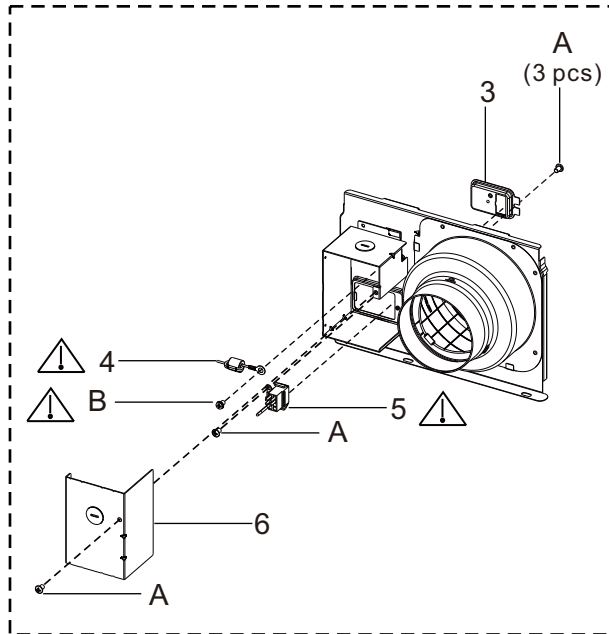

C (4 pcs)

7A ⚠

8 ⚠

D (5 pcs)

D (2 pcs)

9A

10


11

12



E (2 pcs)

D (2 pcs)

Main PCB Section

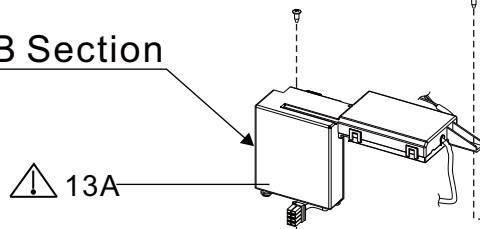

Base PCB Section

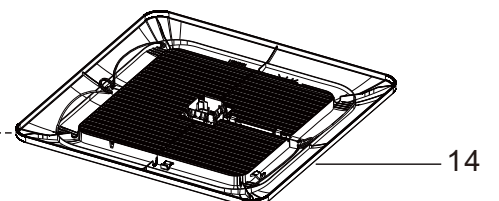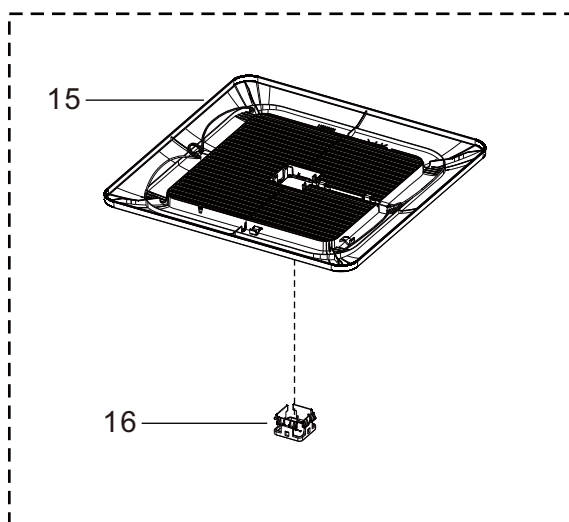



2. Parts Identification

FV-0511VKS2


Main Body Section

Parts for Version B




Name Plate

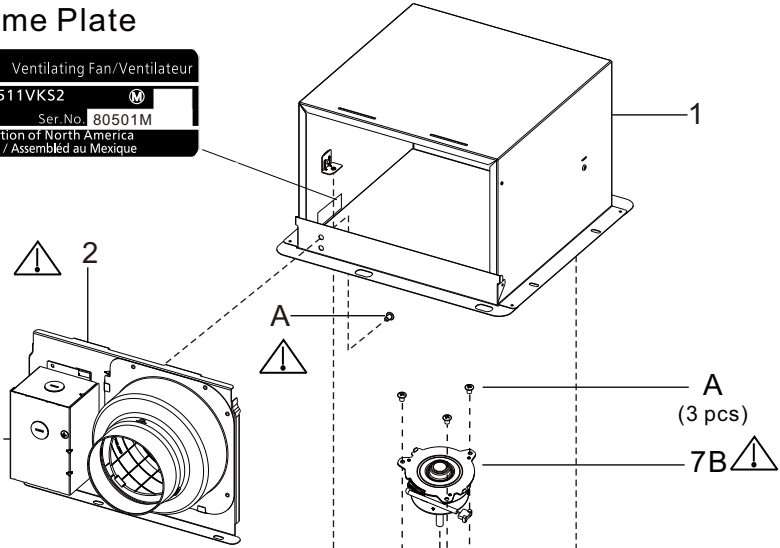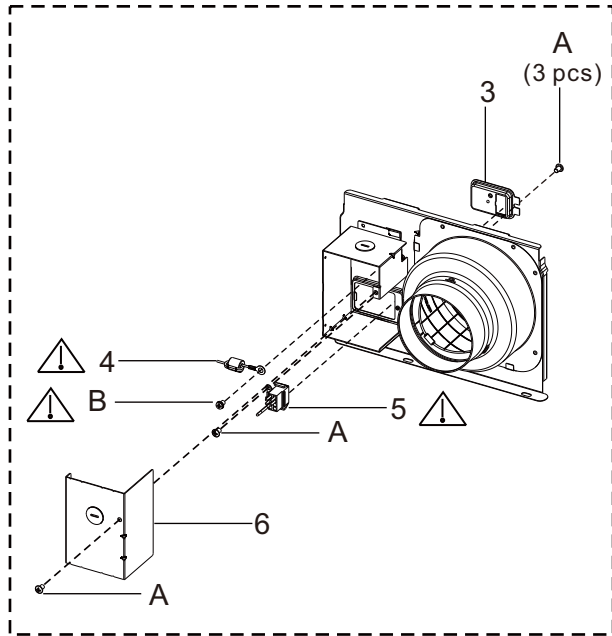

Main PCB Section

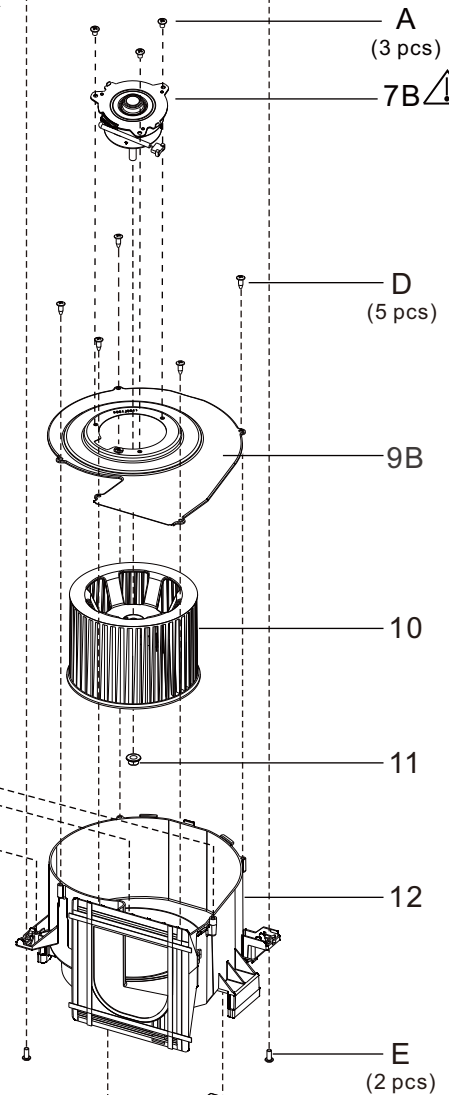

Base PCB Section

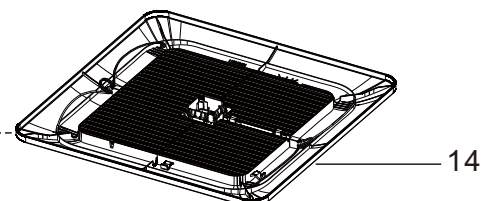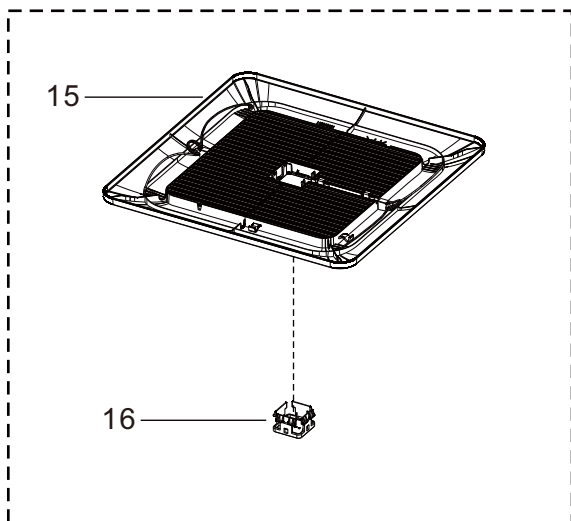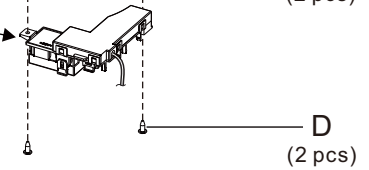


2.Parts Identification


FV-0511VKS2

Main PCB Section




Parts for Version A

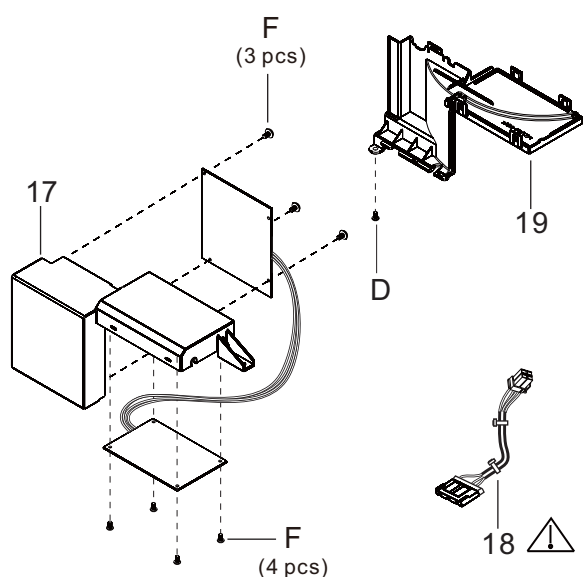

Parts for Version B

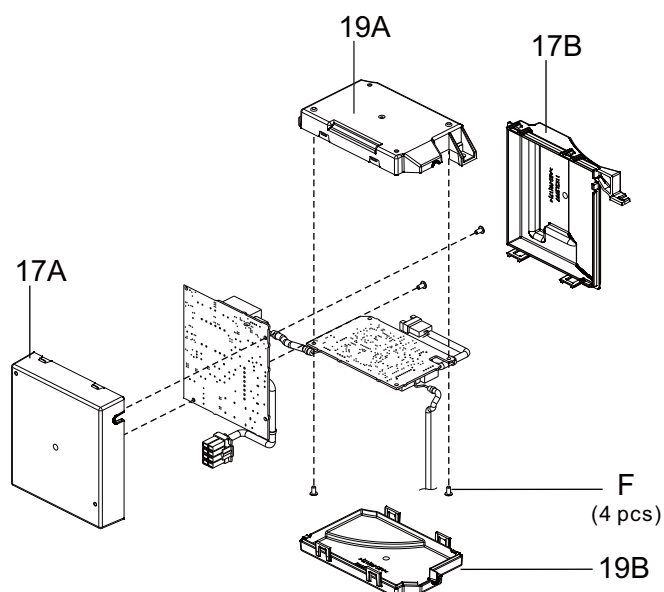

Base PCB Section

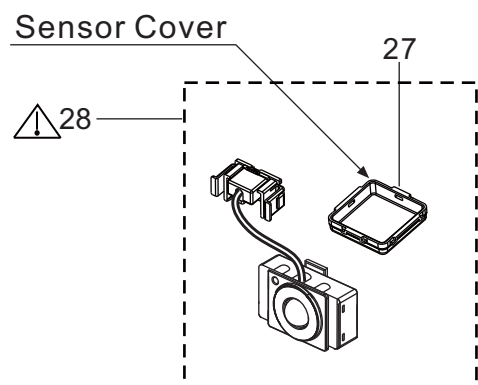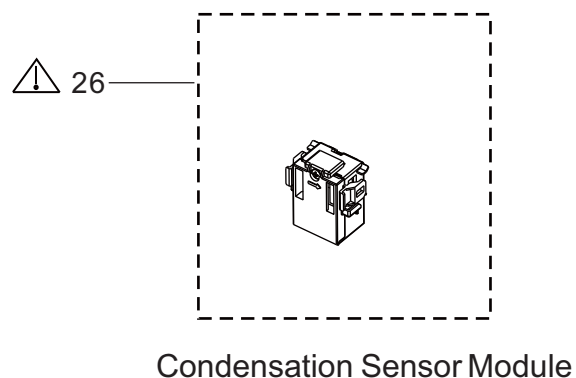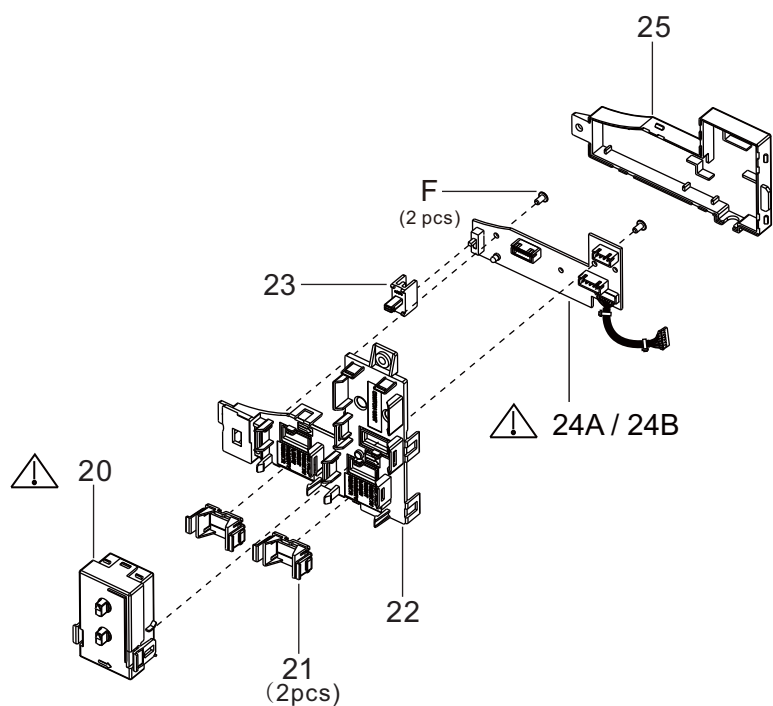


1, Please note that above parts with (No. 26, 27) are the optional parts base on Different customer's request.

2, If install the motion sensor control, please remove the ornamental cover and Replace the sensor Cover.

2. Parts Identification

FV-0511VKS2

Packing Section

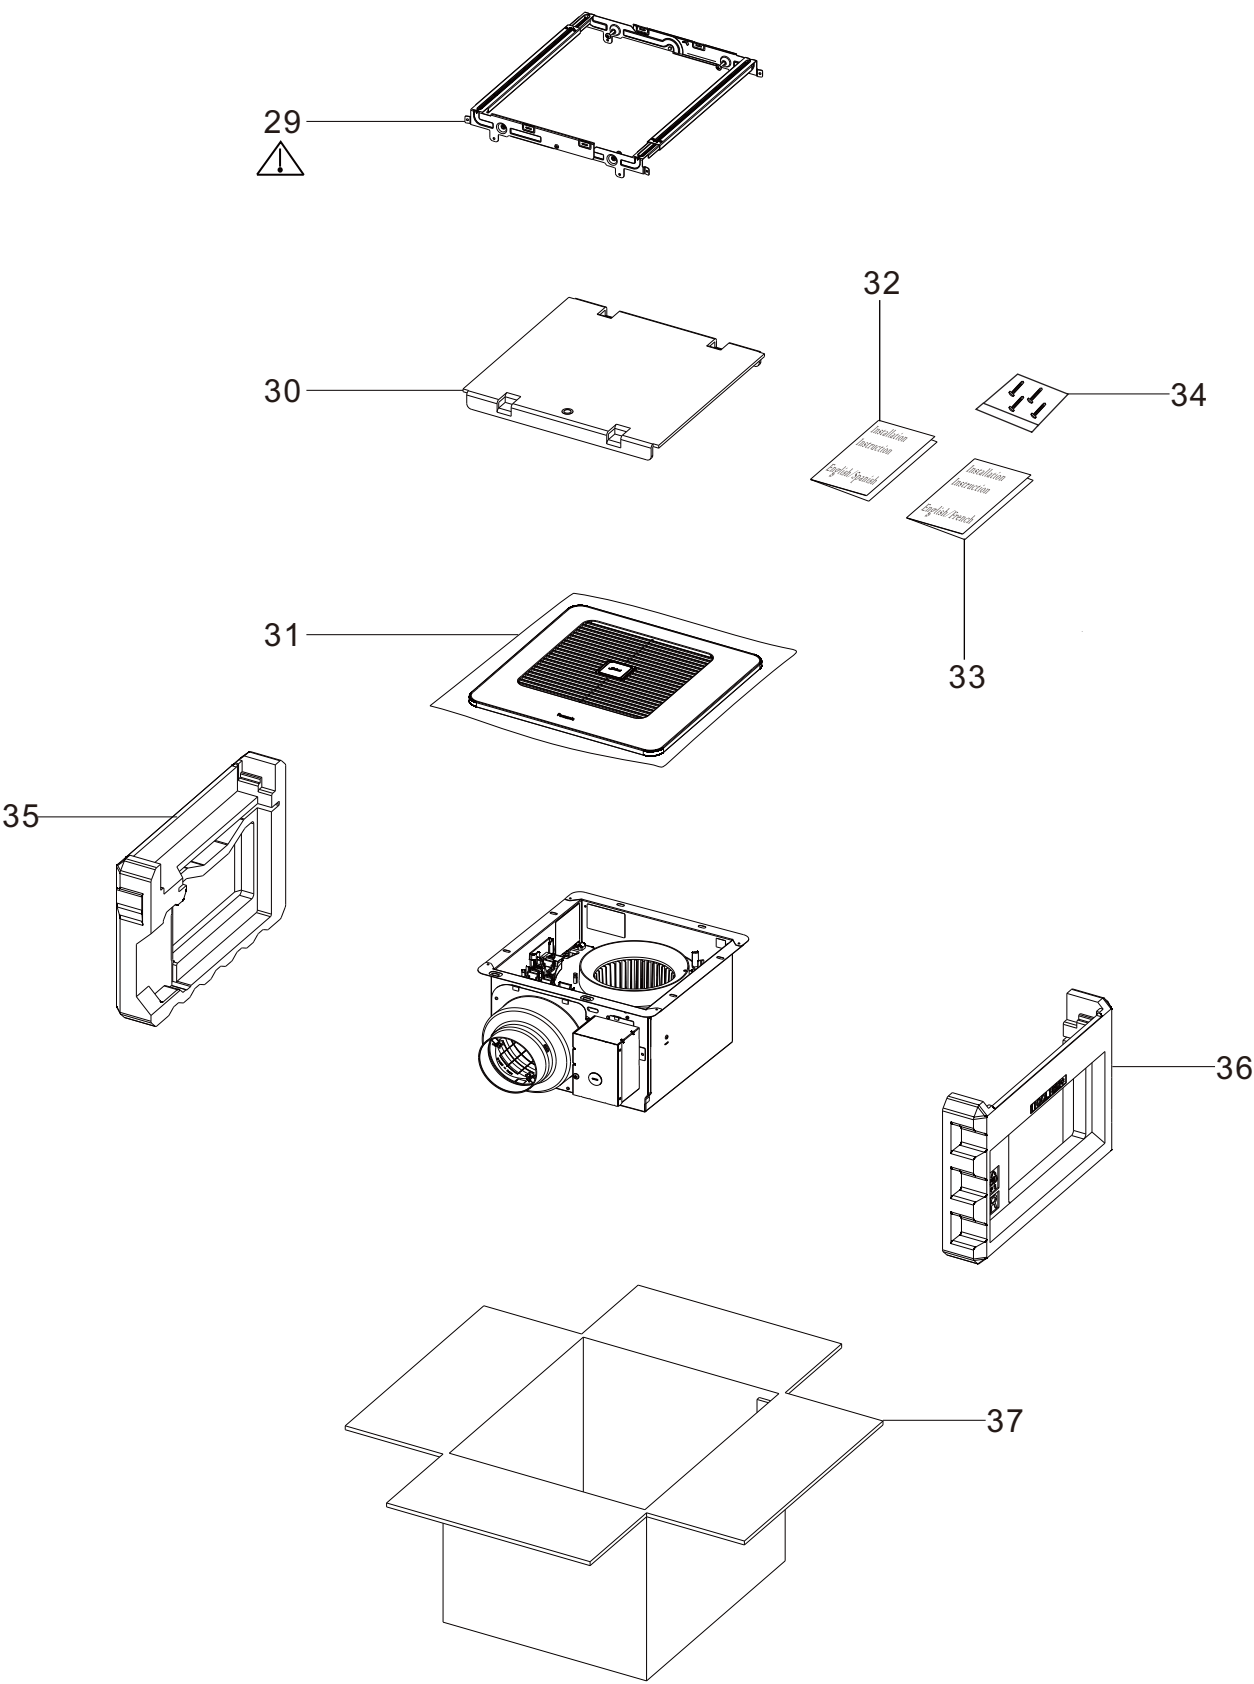


2. Parts Identification


FV-0511VKS2

Main Label

38



39

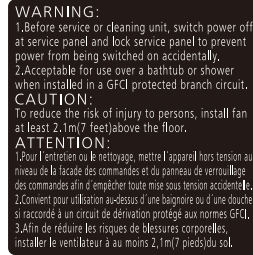

43

40A




8 Means Year: 2018
05 Means Month
01 Means Day

40B



8 Means Year: 2018
05 Means Month
01 Means Day
M: In House MOTOR.

41





44

42



45

3. Wiring Diagram

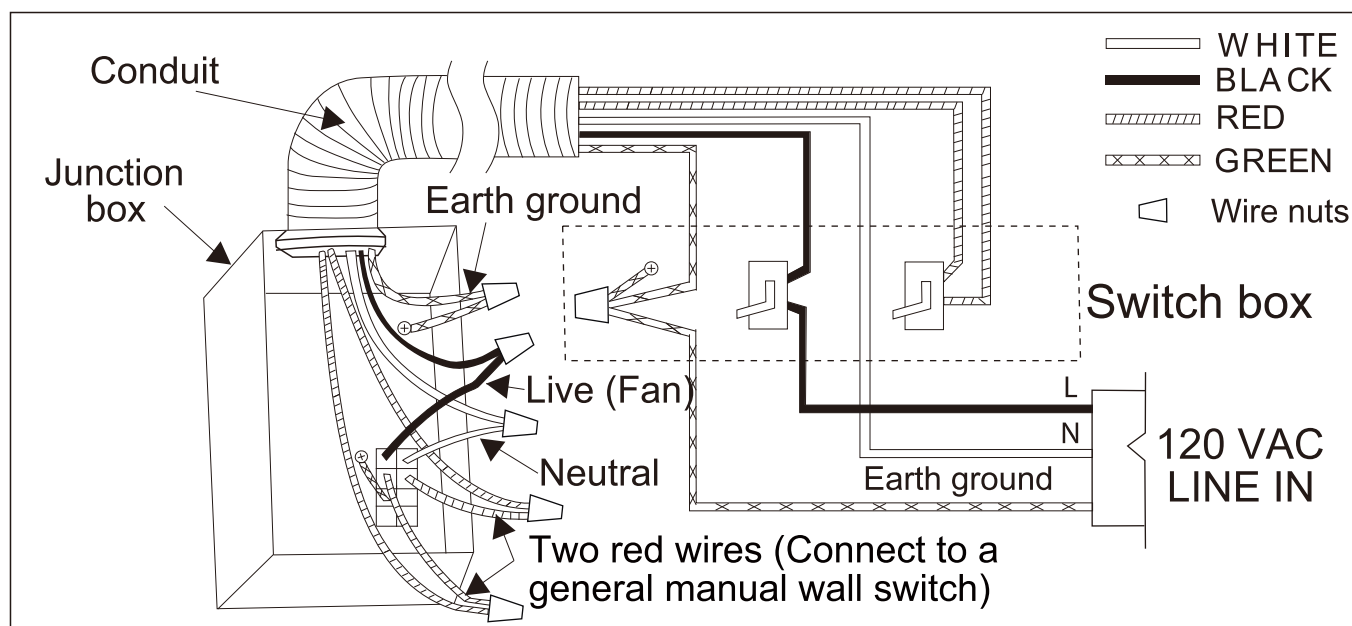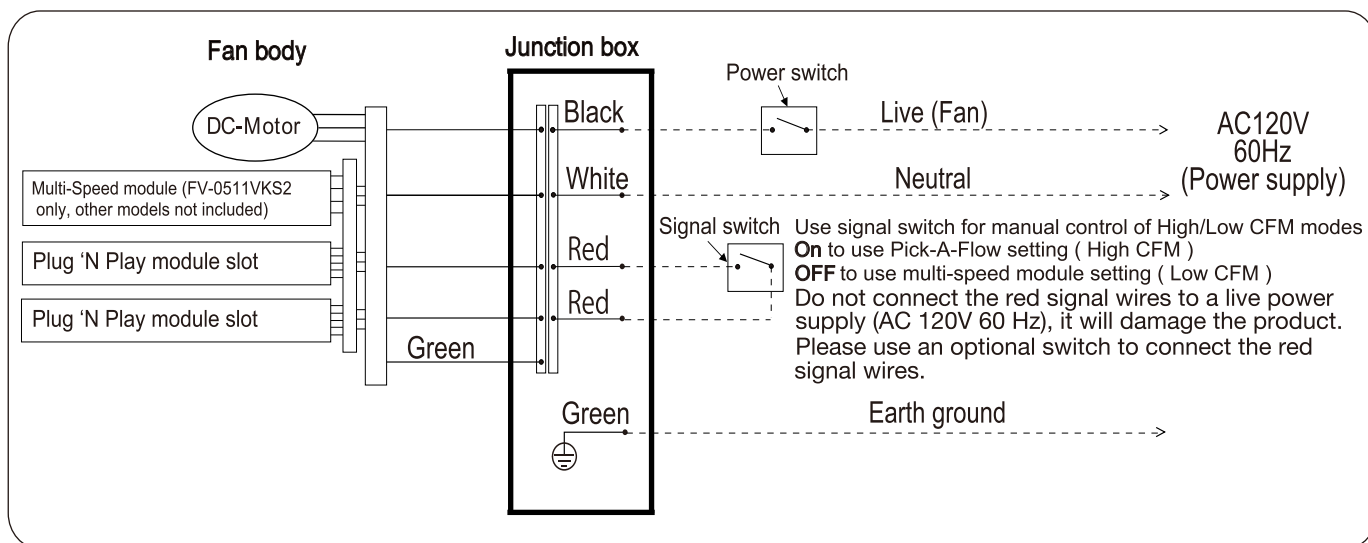

4. Parts List

FV-0511VKS2

Main Body Section

No.	Part No.	Part Name	Q'ty	Remark
1	FFV11QCL1900C	Frame Assembly	1	
2	FFV11VKS2910	Adapter Assembly	1	△
3	FFV11VK20913	Connector Plate	1	
4	FFV1340008S	Ground Wire	1	△
5	FFV11KSL2301	Connector Assy	1	△
6	FFV11QCL1912A	Junction Cover	1	
7A	FFV11KSL2M20	Motor	1	△
7B	FFV11VK2M200	Motor	1	△
8	FFV4620109S	Motor Lead Wire Assembly	1	
9A	FFV11KSL2904	Motor Support	1	
9B	FFV11QCL1904C	Motor Support	1	
10	FFV0400114S	Blade	1	
11	FFV7020021S	Nut	1	
12	FFV11QCL1906B	Casing section	1	
13A	FFV0511VK2PCB	Main PCB Section	1	Include Base PCB Section △
13B	FFV0511VK2M	Main PCB Section	1	Include Base PCB Section △
14	FFV1115VK2	Grill Assembly	1	
15	FFV0511VQC1S	Grill Section	1	
16	FFV2220074S	Ornamental Cover	1	
A	FFVXTT4-8FFJ	Screw (ST4-8)	4	△
B	FFVXYM4DC8BN	Screw w/washer(M4-8)	1	△
C	FFV7000109S	Stainless Steel Screw	4	
D	FFV7000089S	Screw (ST4-12)	9	
E	FFV7000065S	Bind Screw	2	

Main PCB Section

No.	Part No.	Part Name	Q'ty	Remark
17	FFV3740027S	Main PCB Box	1	
17A	FFV11KSL2996	Power PCB Box	1	
17B	FFV11KSL2997	Power PCB Cover	1	
18	FFV11KSL2310	Power Lead Wire	1	△
19	FFV3740014S	Main PCB Cover	1	
19A	FFV11KSL2991	Control PCB Box	1	
19B	FFV11KSL2992	Control PCB Cover	1	
D	FFV7000089S	Screw (ST4-12)	1	
F	FFVXTN3-8GFJ	Screw (M3-8)	7	

4. Parts List

FV-0511VKS2

Base PCB Section

No.	Part No.	Part Name	Q'ty	Remark
20	FFV5530071S	Multi-Speed Module	1	⚠
21	FFV0900063S	Connector Cover	2	
22	FFV0410001S	Base PCB Cover	1	
23	FFV5530072S	Variable Speed Switch	1	
24A	FFV0410002S	Base PCB Assembly	1	⚠
24B	FFV11VK25100	Base PCB Assembly	1	⚠
25	FFV0410003S	Base PCB Box	1	
26	FFV0010237S	Condensation Sensor Module	1	⚠
27	FFV2220051S	Sensor Cover	1	
28	FFV3740029S	Motion Sensor Module	1	⚠
F	FFVXTN3-8GFJ	Screw (M3-8)	2	

Packing Section

No.	Part No.	Part Name	Q'ty	Remark
29	FFV11QCL1920	Hanger Assy	1	⚠
30	FFV4710381S	Grill Pad Assy	1	
31	FFV4650016S	Poly Cover	1	
32	FFV15VK20420	Installation Inst	1	English / Spanish For USA Market
33	FFV15VK20421	Installation Inst	1	English / French For CANADA Market
34	FFV11KSL1M031A	Accessory A	1	
35	FFV11QCL1891	Left Pad	1	
36	FFV11QCL1892	Right Pad	1	
37	FFV11VKS2400	Packing Case Assy	1	

Main Label

No.	Part No.	Part Name	Q'ty	Remark
38	FFV11KSL2011	Switch Label	1	
39	FFV11KSL2012	CFM Label	1	
40A	FFV11VKS2050	Name Plate	1	
40B	FFV11VKS2M50	Name Plate	1	
41	FFV0810011S	Caution Label 1	1	
42	FFV11KSL2055	QR Code Label	1	
43	FFV0810010S	Caution Label	1	
44	FFV6730045S	Warning Label	1	
45	FFV2260003S	Holograph Label	1	